


Accessories

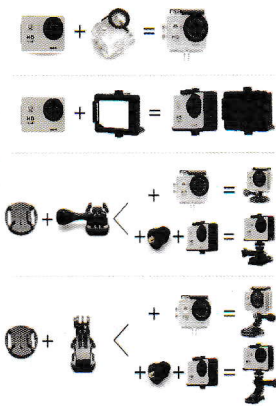

To start recording

Insert the micro SD into the appropriate input and turn on the camera by pressing for about 3 sec. the front power button.

The camera starts up in "video recording" mode from factory settings; then press the top button "OK" to start recording and press it again to stop recording. To turn off the camera, press the front button again for about 3 sec.